

dialer-options

Syntax dialer-options {
 activation-delay *seconds*;
 callback;
 callback-wait-period *time*;
 deactivation-delay *seconds*;
 dial-string [*dial-string-numbers*];
 idle-timeout *seconds*;
 incoming-map {
 caller *caller-number* | accept-all;
 initial-route-check *seconds*;
 load-interval *seconds*;
 load-threshold *percent*;
 pool *pool-name*;
 redial-delay *time*;
 watch-list {
 [*routes*];
 }
 }
}

Hierarchy Level [edit interfaces umd0],
[edit interfaces dln unit *logical-unit-number*],
[edit logical-systems *logical-system-name* interfaces dln unit *logical-unit-number*]

Release Information Statement introduced before JUNOS Release 7.4.

Description Specify the dialer options for configuring logical interfaces for group and user sessions.

The statements are explained separately.

Usage Guidelines See Configuring ISDN Logical Interface Properties and Specifying a USB Modem Interface on J-series Routers.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics *JUNOS Services Interfaces Configuration Guide*

