

dialin

| | |
|---------------------------------|---|
| Syntax | dialin (console routable); |
| Hierarchy Level | [edit interfaces umd0 modem-options] |
| Release Information | Statement introduced in JUNOS Release 8.5. |
| Description | For J-series Services Routers, configure a USB modem port to act as a dial-in console or WAN backup port. |
| Options | <p>console—Configure the USB modem port to operate as a dial-in console for management.</p> <p>routable—Configure the USB modem port to operate as a dial-in WAN backup interface.</p> <p>Default: console</p> |
| Usage Guidelines | See Specifying a USB Modem Interface on J-series Routers. |
| Required Privilege Level | interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. |

