

disable (Link Protection)

Syntax disable;

Hierarchy Level [edit interfaces aeX aggregated-ether-options lacp link-protection]

Release Information Statement introduced in JUNOS Release 9.3.

Description Disable LACP link protection on the interface.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

