

disable-relay

Syntax disable-relay;

Hierarchy Level [edit forwarding-options dhcp-relay overrides],
[edit forwarding-options dhcp-relay group *group-name* overrides],
[edit logical-systems *logical-system-name* forwarding-options dhcp-relay overrides],
[edit logical-systems *logical-system-name* forwarding-options dhcp-relay group *group-name* overrides],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* forwarding-options dhcp-relay overrides],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* forwarding-options dhcp-relay group *group-name* overrides],
[edit routing-instances *routing-instance-name* forwarding-options dhcp-relay overrides],
[edit routing-instances *routing-instance-name* forwarding-options dhcp-relay group *group-name* overrides]

Release Information Statement introduced in JUNOS Release 8.3.

Description Disable DHCP relay on specific interfaces in a group.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ Extended DHCP Relay Agent Overview

