

dlci

Syntax	dlci <i>dlci-identifier</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	<p>For Frame Relay and Multilink Frame Relay (MLFR) user-to-network interface (UNI) network-to-network interface (NNI) encapsulation only, and for link services, voice services and point-to-point interfaces only, configure the data-link connection identifier (DLCI) for a permanent virtual circuit (PVC) or an switched virtual circuit (SVC).</p> <p>To configure a DLCI for a point-to-multipoint interface, use the multipoint-destination statement to specify the DLCI.</p>
Options	<p><i>dlci-identifier</i>—Data-link connection identifier.</p> <p>Range: 16 through 1022. For Frame Relay DLCI ranges for channelized interfaces, see [Unresolved xref].</p>
Usage Guidelines	See Configuring Frame Relay DLCIs, Configuring Frame Relay DLCIs, and the <i>JUNOS Services Interfaces Configuration Guide</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	[Unresolved xref] , multipoint-destination, multicast-dlci

