

drop-timeout

Syntax	drop-timeout <i>milliseconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For link services, multilink, and voice services interfaces only, configure the drop timeout period, in milliseconds.
Options	<i>milliseconds</i> —Drop timeout period. Range: 0 through 2000 milliseconds Default: 0 ms (disabled)
Usage Guidelines	See the <i>JUNOS Services Interfaces Configuration Guide</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

