

dsr

Syntax	dsr (ignore normal require);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, data-set-ready (DSR).
Options	ignore—The from-DCE signal is ignored. normal—Normal DSR signal handling as defined by the TIA/EIA Standard 530. require—The from-DCE signal must be asserted. Default: normal
Usage Guidelines	See Configuring the Serial Signal Handling.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

