

dte-options

Syntax dte-options {
 control-signal (assert | de-assert | normal);
 cts (ignore | normal | require);
 dcd (ignore | normal | require);
 dsr (ignore | normal | require);
 dtr *signal-handling-option*;
 ignore-all;
 indication (ignore | normal | require);
 rts (assert | de-assert | normal);
 tm (ignore | normal | require);
 }

Hierarchy Level [edit interfaces *interface-name* serial-options]

Release Information Statement introduced in JUNOS Release 8.3.
 Statement previously known as **control-leads**.

Description For M-series and T-series routing platforms, configure the serial interface signal characteristics.

 The statements are explained separately.

Usage Guidelines See Configuring the Serial Signal Handling.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

