

dtr-circuit

Syntax	dtr-circuit (balanced unbalanced);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure a DTR circuit.
Options	<p>balanced—Balanced DTR signal.</p> <p>unbalanced—Unbalanced DTR signal.</p> <p>Default: balanced</p>
Usage Guidelines	See Configuring the Serial DTR Circuit.
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

