

dtr

Syntax	<code>dtr signal-handling-option;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For EIA-530 and V.35 interfaces only, configure the to-DCE signal, data-transmit-ready (DTR).
Options	<p><i>signal-handling-option</i>—Signal handling for the DTR signal. The signal handling can be one of the following:</p> <p><i>assert</i>—The to-DCE signal must be asserted.</p> <p><i>auto-synchronize</i>—Normal DTR signal with automatic synchronization. This statement has two substatements:</p> <p><i>duration milliseconds</i>—Pulse duration of resynchronization. Range: 1 through 1000 milliseconds Default: 1000 milliseconds</p> <p><i>interval seconds</i>—Offset interval for resynchronization. Range: 1 through 31 seconds Default: 15 seconds</p> <p><i>de-assert</i>—The to-DCE signal must be deasserted.</p> <p><i>normal</i>—Normal DTR signal handling as defined by the TIA/EIA Standard 530. Default: normal</p>
Usage Guidelines	See Configuring the Serial Signal Handling.
Required Privilege Level	<i>interface</i> —To view this statement in the configuration. <i>interface-control</i> —To add this statement to the configuration.

