

entity-type

Syntax	entity-type (host mobility-agent);
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> services mobile-ip peer spi <i>hexadecimal-value</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instances-name</i> services mobile-ip peer spi <i>hexadecimal-value</i>], [edit routing-instances <i>routing-instances-name</i> services mobile-ip peer spi <i>hexadecimal-value</i>], [edit services mobile-ip peer spi <i>hexadecimal-value</i>]
Release Information	Statement introduced in JUNOS Release 9.3. Support at the [edit logical-systems <i>logical-system-name</i> services mobile-ip peer spi <i>hexadecimal-value</i>], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instances-name</i> services mobile-ip peer spi <i>hexadecimal-value</i>], and [edit routing-instances <i>routing-instances-name</i> services mobile-ip peer spi <i>hexadecimal-value</i>] hierarchy levels added in JUNOS Release 9.5.
Description	Configure the security parameter for the peer entity, either a mobile node, home agent, or foreign agent.
Options	host—Mobile node in home agent mobility-agent—Home agent or foreign agent
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	■ Configuring Mobile IP ■ Configuring the Mobile IP Home Agent

