

## ether-type

---

<b>Syntax</b>	ether-type (0x8100   0x88a8   0x9100)
<b>Hierarchy Level</b>	[edit ethernet-switching-options dot1q-tunneling]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.3 for EX-series switches.
<b>Description</b>	Configure a global value for the Ethertype. Only one Ethertype value is supported at a time. The Ethertype value appears in the Ethernet type field of the packet. It specifies the protocol being transported in the Ethernet frame.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ dot1q-tunneling</li><li>■ Example: Setting Up Q-in-Q Tunneling on EX-series Switches</li><li>■ Configuring Q-in-Q Tunneling (CLI Procedure)</li></ul>

