

## ethernet-port-type-virtual

---

<b>Syntax</b>	ethernet-port-type-virtual;
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> radius options]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.1.
<b>Description</b>	Specify the physical port type the router uses to authenticate clients. The port type is passed in RADIUS attribute 61 (NAS-Port-Type). This statement specifies a port type of virtual; by default the router passes a port type of <b>ethernet</b> in RADIUS attribute 61.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Topics</b>	■ <a href="#">Configuring RADIUS Server Parameters for Subscriber Access</a>

