

flow-control

Syntax	(flow-control no-flow-control);
Hierarchy Level	[edit interfaces <i>interface-name</i> aggregated-ether-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> ggether-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, explicitly enable flow control, which regulates the flow of packets from the routing platform to the remote side of the connection. Enabling flow control is useful when the remote device is a Gigabit Ethernet switch. Flow control is not supported on the 4-port Fast Ethernet PIC.
Default	Flow control is the default behavior.
Usage Guidelines	See Configuring Flow Control.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

