

## flow-control

---

<b>Syntax</b>	(flow-control   no-flow-control);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ether-options]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	<p>Explicitly enable flow control, which regulates the flow of packets from the switch to the remote side of the connection, or disable it.</p> <ul style="list-style-type: none"><li>■ <b>flow-control</b>—Enable flow control; flow control is useful when the remote device is a Gigabit Ethernet switch.</li><li>■ <b>no-flow-control</b>—Disable flow control.</li></ul>
<b>Default</b>	Flow control enabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Configuring Gigabit Ethernet Interfaces (CLI Procedure)</li><li>■ Configuring Gigabit Ethernet Interfaces (J-Web Procedure)</li><li>■ <i>JUNOS Software Network Interfaces Configuration Guide</i> at <a href="http://www.juniper.net/techpubs/software/junos/junos95/index.html">http://www.juniper.net/techpubs/software/junos/junos95/index.html</a></li></ul>

