

## guest-vlan

---

<b>Syntax</b>	guest-vlan ( <i>vlan-id</i>   <i>vlan-name</i> );
<b>Hierarchy Level</b>	[edit protocols dot1x authenticator interface (all   [ <i>interface-names</i> ])]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	Specify the VLAN to which an interface is moved when no 802.1X supplicants are connected on the interface. The VLAN specified must already exist on the switch.
<b>Default</b>	None
<b>Options</b>	<i>vlan-id</i> —VLAN tag identifier of the guest VLAN. <i>vlan-name</i> —Name of the guest VLAN.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Example: Setting Up 802.1X in Conference Rooms to Provide Internet Access to Corporate Visitors on an EX-series Switch</li><li>■ Understanding Guest VLANs for 802.1X on EX-series Switches</li></ul>

