

## hello-timer

---

<b>Syntax</b>	hello-timer <i>milliseconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	For link services and voice services interfaces only, configure the rate at which hello messages are sent. A hello message is transmitted after a period defined in milliseconds has elapsed.
<b>Options</b>	milliseconds—The rate at which hello messages are sent. <b>Range:</b> 1 through 180 milliseconds <b>Default:</b> 10 milliseconds
<b>Usage Guidelines</b>	See the <i>JUNOS Services Interfaces Configuration Guide</i> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	address, acknowledge-timer

