

ignore-all

Syntax	ignore-all;
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Ignore all control leads. You can include the ignore-all statement in the configuration only if you do not explicitly enable other signal handling options at the dte-options hierarchy level.
Usage Guidelines	See Configuring the Serial Signal Handling.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

