

incoming-map

Syntax incoming-map {
 caller *caller-number* | accept-all;
 }

Hierarchy Level [edit interfaces *dl*n unit *logical-unit-number* dialer-options],
 [edit logical-systems *logical-system-name* interfaces *dl*n unit *logical-unit-number*
 dialer-options]

Release Information Statement introduced in JUNOS Release 7.5.

Description (J-series Services Routers) For interfaces configured for ISDN, specify the dialer to accept incoming calls.

The statements are explained separately.



NOTE: The `incoming-map` statement is mandatory for the router to accept any incoming ISDN calls.

Usage Guidelines See Configuring ISDN Logical Interface Properties.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Topics *J-series Services Router Basic LAN and WAN Access Configuration Guide*

