

## indication-polarity

---

<b>Syntax</b>	indication-polarity (negative   positive);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> serial-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	For X.21 interfaces only, configure the indication signal polarity.
<b>Options</b>	positive—Positive signal polarity. negative—Negative signal polarity. <b>Default:</b> positive
<b>Usage Guidelines</b>	See Configuring Serial Signal Polarities.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

