

initial-route-check

Syntax	initial-route-check <i>seconds</i> ;
Hierarchy Level	[edit interface <i>dlIn</i> unit <i>logical-unit-number</i> dialer-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	(J-series Services Routers) For ISDN interfaces, allows the router to check whether the primary route is up after the initial startup of the router is complete and the timer expires.
Options	<i>seconds</i> —How long to wait to check if the primary interface is up after the router comes up. Range: 1 through 300 seconds Default: 120 seconds
Usage Guidelines	See [Unresolved xref] .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i>

