

inner-vlan-id-range

Syntax	inner-vlan-id-range start <i>start-id</i> end <i>end-id</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],
Release Information	Statement introduced in JUNOS Release 9.0.
Description	The range of VLAN IDs to be used in the ATM-to-Ethernet interworking cross-connect. Specify the starting VLAN ID and ending VLAN ID.
Options	start-id —The lowest VLAN ID to be used. end-id —The highest VLAN ID to be used. Range: 32 through 4094
Usage Guidelines	See Configuring ATM-to-Ethernet Interworking.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

