

instance

Syntax	<code>instance <i>vpls-instance-name</i>;</code>
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>name</i>]
Description	Specify the VPLS instance of the default maintenance domain.
Usage Guidelines	See Configuring Maintenance Intermediate Points.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	maintenance-domain

