

interface

Syntax interface (all | *interface-name*) {
 disable;
 maximum-power *watts*;
 priority *value*;
 telemetries {
 disable;
 interval *minutes*;
 duration *hours*;
 }
 }

Hierarchy Level [edit poe]

Release Information Statement introduced in JUNOS Release 9.0 for EX-series switches.

Description Enable a PoE interface for a PoE port. An interface must be enabled in order for the port to provide power to a connected powered device.

Default The PoE interface is enabled by default.

Options all—All interfaces on the switch.

interface-name —Name of the specific interface.

The remaining statements are explained separately.

Required Privilege Level routing—To view this statement in the configuration.
 routing-control—To add this statement to the configuration.

- Related Topics**
- Example: Configuring PoE Interfaces on an EX-series Switch
 - Example: Configuring PoE Interfaces with Different Priorities on an EX-series Switch
 - Configuring PoE (CLI Procedure)
 - Configuring PoE (J-Web Procedure)
 - PoE and EX-series Switches Overview

