

interface

Syntax	interface (all <i>interface-name</i>) { bandwidth <i>bandwidth</i> ; level <i>level</i> ; no-broadcast; no-unknown-unicast; }
Hierarchy Level	[edit ethernet-switching-options storm-control]
Release Information	Statement introduced in JUNOS Release 9.1 for EX-series switches.
Description	<p>Apply storm control to all interfaces or to the specified interface.</p> <p>The statements are explained separately.</p>
Default	Storm control is disabled.
Options	<p>all—Apply storm control to all interfaces.</p> <p><i>interface-name</i>—Apply storm control to the specified interface.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Topics	<ul style="list-style-type: none">■ Example: Configuring Storm Control to Prevent Network Outages on EX-series Switches■ Understanding Storm Control on EX-series Switches

