

## interfaces

---

<b>Syntax</b>	interfaces { ... }
<b>Hierarchy Level</b>	[edit]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	Configure interfaces on the routing platform.
<b>Default</b>	The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.
<b>Usage Guidelines</b>	See individual chapters.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

