

inverse-arp

Syntax	inverse-arp;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i> multipoint-destination <i>destination</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i> multipoint-destination <i>destination</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For ATM encapsulation, enable responses to received inverse ATM ARP requests. For Frame Relay encapsulation, enable responses to received inverse Frame Relay ARP requests.
Default	Inverse ARP is disabled on all ATM and Frame Relay interfaces.
Usage Guidelines	See Configuring Inverse ATM1 or ATM2 ARP or Configuring Inverse Frame Relay ARP.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

