

invert-data

Syntax invert-data;

Hierarchy Level [edit interface e1-*fpc/pic/port*],
[edit interface t1-*fpc/pic/port*],
[edit interfaces *interface-name* ds0-options],
[edit interfaces *interface-name* e1-options],
[edit interfaces *interface-name* t1-options],
[edit interfaces *interface-name* e3-options]

Release Information Statement introduced before JUNOS Release 7.4.

Description Invert the transmission of unused data bits on the DS0, E1, E3, and T1 interface.



NOTE: When configuring E1 interfaces on the 10-port Channelized E1/T1 IQE PIC, invert-data must be set at the [edit interface e1-*fpc/pic/port*] hierarchy level.

When configuring T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, invert-data must be set at the [edit interface t1-*fpc/pic/port*] hierarchy level.

Usage Guidelines See Configuring E1 Data Inversion, Configuring E3 Data Inversion, and Configuring T1 Data Inversion.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

