

## lACP

---

**Syntax**    `lACP mode {  
                  periodic interval;  
                  }`

**Hierarchy Level**    [edit interfaces *aex* aggregated-ether-options]

**Release Information**    Statement introduced in JUNOS Release 9.0 for EX-series switches.

**Description**    Configure the Link Aggregation Control Protocol (LACP).

**Default**    LACP is not enabled.

**Options**    *mode* —LACP mode:

- *active*—Initiate transmission of LACP packets
- *passive*—Respond to LACP packets

The remaining statement is explained separately.

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

- Related Topics**
- Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between a Virtual Chassis Access Switch and a Virtual Chassis Distribution Switch
  - Configuring Aggregated Ethernet LACP (CLI Procedure)
  - Configuring Aggregated Ethernet Interfaces (J-Web Procedure)
  - Understanding Aggregated Ethernet Interfaces and LACP
  - *JUNOS Software Network Interfaces Configuration Guide* at <http://www.juniper.net/techpubs/software/junos/junos95/index.html>

