

## lcp-restart-timer

---

<b>Syntax</b>	lcp-restart-timer <i>milliseconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]
<b>Release Information</b>	Statement introduced in JUNOS Release 8.1.
<b>Description</b>	For interfaces with PPP, PPP TCC, PPP over Ethernet, PPP over ATM, and PPP over Frame Relay encapsulations, configure a restart timer for the Link Control Protocol (LCP) component of a PPP session.
<b>Options</b>	<i>milliseconds</i> —The time in milliseconds between successive LCP configuration requests. <b>Range:</b> 20 through 10000 milliseconds. <b>Default:</b> 3 seconds
<b>Usage Guidelines</b>	See Configuring the PPP Restart Timers.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

