

## leaveall-timer

---

<b>Syntax</b>	leaveall-timer <i>milliseconds</i> ;
<b>Hierarchy Level</b>	[edit protocols gvrp]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	For GARP VLAN Registration Protocol (GVRP), configure the interval at which Leave All messages are sent on the interfaces. Leave All messages maintain current GVRP VLAN membership information in the network. A Leave All message instructs the port to change the GVRP state for all its VLANs to a leaving state and remove them unless a Join message is received before the leave timer expires.
<b>Default</b>	1000 centiseconds
<b>Options</b>	<i>milliseconds</i> —Number of milliseconds. <b>Range:</b> 5 times leave-timer value <b>Default:</b> 1000 centiseconds
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ show gvrp</li><li>■ Example: Configure Automatic VLAN Administration Using GVRP</li></ul>

