

linear-red-profile

Syntax	<code>linear-red-profile <i>profile-name</i>;</code>
Hierarchy Level	[edit interfaces <i>at-fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> [Unresolved xref] <i>class-name</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For ATM2 IQ interfaces only, assign a linear RED profile to a specified forwarding class. To define the linear RED profiles, include the <code>linear-red-profiles</code> statement at the [edit interfaces <i>at-fpc/pic/port</i> atm-options] hierarchy level.
Default	If you do not include either the <code>epd-threshold</code> or the <code>linear-red-profile</code> statement in the forwarding class configuration, the JUNOS software uses an EPD threshold based on the available bandwidth and other parameters.
Options	<i>profile-name</i> —Name of the linear RED profile.
Usage Guidelines	See Configuring ATM2 IQ VC Tunnel CoS Components.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	[Unresolved xref] , linear-red-profiles

