

Imi (interfaces)

Syntax Imi {
 Imi-type (ansi | itu);
 n391dte *number*;
 n392dce *seconds*;
 n392dte *number*;
 n393dce *number*;
 n393dte *number*;
 t391dte *number*;
 t392dce *seconds*;
 }

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced before JUNOS Release 7.4.

Description Set Frame Relay keepalive parameters.

Options n391dte—DTE full status polling interval.

Range: 1 through 255

Default: 6

 n392dce—DCE error threshold, in number of errors.

Range: 1 through 10

Default: 3

 n392dte—DTE error threshold, in number of errors.

Range: 1 through 10

Default: 3

 n393dce—DCE monitored event-count.

Range: 1 through 10

Default: 4

 n393dte—DTE monitored event-count.

Range: 1 through 10

Default: 4

 t391dte—DTE polling timer.

Range: 5 through 30 seconds

Default: 10 seconds

 t392dce—DCE polling timer.

Range: 5 through 30 seconds

Default: 15 seconds

 The remaining statements are explained separately.

Usage Guidelines See Configuring Frame Relay Keepalives.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics lmi-type