

## lmi-type

---

<b>Syntax</b>	lmi-type (ansi   itu);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> lmi (interfaces)], [edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	Set Frame Relay Local Management Interface (LMI) type.
<b>Options</b>	ansi—Use ANSI T1.167 Annex D LMIs.  itu—Use ITU Q933 Annex A LMIs. <b>Default:</b> ansi
<b>Usage Guidelines</b>	See Configuring Frame Relay Keepalives and the <i>JUNOS Services Interfaces Configuration Guide</i> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

