

## load-interval

---

<b>Syntax</b>	load-interval <i>seconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>dln</i> unit <i>logical-unit-number</i> dialer-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>dln</i> unit <i>logical-unit-number</i> dialer-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	(J-series Services Routers) For ISDN logical interfaces, the interval used to calculate the average load on the network. By default, the average interface load is calculated every 60 seconds.
<b>Options</b>	<i>seconds</i> —Number of seconds at which the average load calculation is triggered. <b>Range:</b> 20 through 180, in 10-second intervals <b>Default:</b> 60 seconds
<b>Usage Guidelines</b>	See Configuring ISDN Logical Interface Properties.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i>

