

load-threshold

Syntax	load-threshold <i>percent</i> ;
Hierarchy Level	[edit interfaces <i>dl</i> n unit <i>logical-unit-number</i> dialer-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>dl</i> n unit <i>logical-unit-number</i> dialer-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	(J-series Services Routers) For ISDN logical interfaces, specify the bandwidth threshold percentage used for adding interfaces. Another link is added to the multilink bundle when the load reaches the threshold value you set. Specify a percentage between 0 and 100.
Options	<i>percent</i> —Bandwidth threshold percentage used for adding interfaces. When set to 0, all available channels are dialed. Range: 0 through 100 Default: 100 seconds
Usage Guidelines	See Configuring ISDN Logical Interface Properties.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i>

