

## local-password

---

<b>Syntax</b>	local-password <i>password</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ppp-options pap], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap]
<b>Release Information</b>	Statement introduced in JUNOS Release 8.3.
<b>Description</b>	Configure the host password for sending PAP requests.
<b>Usage Guidelines</b>	See Configuring PPP PAP Authentication.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	Configuring the PPP Password Authentication Protocol

