

lockout

Syntax	lockout;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure a lockout of protection, forcing the use of the working circuit and locking out the protect circuit regardless of anything else.
Usage Guidelines	See Configuring SONET/SDH Physical Interface Properties.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

