

loop-timing

Syntax	(loop-timing no-loop-timing);
Hierarchy Level	[edit interfaces <i>ct3-fpc/pic/port</i> t3-options], [edit interfaces <i>e1-fpc/pic/port:0</i> sonet-options], [edit interfaces <i>stm1-fpc/pic/port</i> sonet-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For channelized IQ interfaces and non-IQ channelized STM1 interfaces only, configure the SONET/SDH or DS3-level clocking source.
Options	loop-timing —Configure loop timing (external) clocking. no-loop-timing —Configure line timing (internal) clocking. Default: no-loop-timing
Usage Guidelines	See Configuring SONET/SDH Physical Interface Properties and Configuring the Channelized T3 Loop Timing.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	clocking

