

## mac-limit

---

<b>Syntax</b>	mac-limit <i>number</i> ;
<b>Hierarchy Level</b>	[edit vlans <i>vlan-name</i> ]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	Configure the number of MAC addresses allowed on a VLAN.
<b>Default</b>	MAC limit is disabled.
<b>Options</b>	<i>number</i> —Maximum number of MAC addresses. <b>Range:</b> 1 through 32768
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ show vlans</li><li>■ Example: Setting Up Basic Bridging and a VLAN for an EX-series Switch</li><li>■ Configuring MAC Table Aging (CLI Procedure)</li><li>■ Understanding Bridging and VLANs on EX-series Switches</li></ul>

