

## management

---

<b>Syntax</b>	management <i>type</i> ;
<b>Hierarchy Level</b>	[edit poe]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches. class option introduced in JUNOS Release 9.3 for EX-series switches.
<b>Description</b>	Designate the way that the switch's PoE controller allocates power to the PoE ports.
<b>Default</b>	static
<b>Options</b>	<i>type</i> —Management type: <ul style="list-style-type: none"><li>■ <b>class</b>—The power available for the interface is determined based class of powered device connected. See section Classes of Powered Devices in PoE and EX-series Switches Overview for more information.</li><li>■ <b>static</b>—The switch reserves a certain amount of power for the PoE port even when a powered device is not connected to the port. This setting ensures that power is available when needed.</li></ul>
<b>Required Privilege Level</b>	router—To view this statement in the configuration. router-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Example: Configuring PoE Interfaces on an EX-series Switch</li><li>■ Example: Configuring PoE Interfaces with Different Priorities on an EX-series Switch</li><li>■ Configuring PoE (CLI Procedure)</li><li>■ Configuring PoE (J-Web Procedure)</li><li>■ PoE and EX-series Switches Overview</li></ul>

