

master-only

| | |
|---------------------------------|--|
| Syntax | master-only; |
| Hierarchy Level | [edit groups rex interfaces fxp0 unit <i>logical-unit-number</i> family <i>family</i> address], [edit groups rex logical-systems <i>logical-system-name</i> interfaces fxp0 unit <i>logical-unit-number</i> family <i>family</i> address] [edit interfaces fxp0 unit <i>logical-unit-number</i> family <i>family</i> address], [edit logical-systems <i>logical-system-name</i> interfaces fxp0 unit <i>logical-unit-number</i> family <i>family</i> address] |
| Release Information | Statement introduced before JUNOS Release 7.4. |
| Description | Configure the IP address to be used when the Routing Engine is the current master. |
| Usage Guidelines | See Configuring a Consistent Management IP Address. |
| Required Privilege Level | interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. |
| Related Topics | For information about the groups statement, see the <i>JUNOS CLI User Guide</i> . |

