

max-retry

Syntax	max-retry <i>count</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family llc2], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family llc2]
Release Information	Statement introduced in JUNOS Release 7.4.
Description	For J-series Services Routers only. On Ethernet interfaces configured for DLSw, configure the number of retries the router should attempt when waiting for a response.
Options	<i>count</i> —Number of retries. Range: 1 through 127 Default: 10
Usage Guidelines	See Configuring LLC2 Options.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<i>J-series Services Router Advanced WAN Access Configuration Guide</i>

