

minimum-links

Syntax	minimum-links <i>number</i> ;
Hierarchy Level	[edit interfaces aex aggregated-ether-options], [edit interfaces asx aggregated-sonet-options], [edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For aggregated Ethernet, SONET/SDH, multilink, link services, and voice services interfaces only, set the minimum number of links that must be up for the bundle to be labeled up.
Options	<i>number</i> —Number of links. Range: 1 through 8 (1 through 16 for Ethernet and SONET interfaces on the MX-series, M320, M120, T-series or TX matrix routers) Default: 1
Usage Guidelines	See Configuring Aggregated Ethernet Minimum Links, Configuring Aggregated SONET/SDH Interfaces, or the <i>JUNOS Services Interfaces Configuration Guide</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

