


mip-half-function

Syntax	mip-half-function (none default explicit);
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>md-name</i>]
Description	Specify the OAM Ethernet CFM maintenance domain MIP half functions.
	NOTE: Whenever a MIP is configured and a bridge domain is mapped to multiple maintenance domains (MD) or maintenance associations (MA), it is essential that the mip-half-function value for all MDs and MAs are the same.
Options	<p>none—Specify to not use the mip-half-function.</p> <p>default—Specify to use the default mip-half-function.</p> <p>explicit—Specify an explicit mip-half-function.</p>
Usage Guidelines	See Creating the Maintenance Domain.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	See maintenance-domain.

