

multipoint

Syntax	<code>multipoint;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure the interface unit as a multipoint connection.
Default	If you omit this statement, the interface unit is configured as a point-to-point connection.
Usage Guidelines	See Configuring a Multipoint Connection.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	point-to-point

