

ncp-restart-timer

Syntax	<code>ncp-restart-timer <i>milliseconds</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]
Release Information	Statement introduced in JUNOS Release 8.1.
Description	For interfaces with PPP and PPP TCC encapsulations and on multilink PPP bundle interfaces, configure a restart timer for the Network Control Protocol (NCP) component of a PPP session.
Options	<i>milliseconds</i> —The time in milliseconds between successive NCP configuration requests. Range: 500 through 10000 milliseconds. Default: 3 seconds
Usage Guidelines	See Configuring the PPP Restart Timers.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

