

## no-keepalives

---

<b>Syntax</b>	no-keepalives;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	<p>Disable the sending of keepalives on a physical interface configured with PPP, Frame Relay, or Cisco HDLC encapsulation. The default keepalive interval is 10 seconds.</p> <p>For ATM2 IQ interfaces only, you can disable keepalives on a logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"><li>■ atm-ppp-llc—PPP over AAL5 LLC encapsulation.</li><li>■ atm-ppp-vc-mux—PPP over AAL5 multiplex encapsulation.</li></ul>
<b>Usage Guidelines</b>	See Configuring Keepalives Disabling the Sending of PPPoE Keepalive Messages, and Configuring Frame Relay Keepalives.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

