

oam-period

Syntax	oam-period (disable seconds);
Hierarchy Level	[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	<p>For ATM encapsulation only, configure the OAM F5 loopback cell period. Not supported on ATM-over-SHDSL interfaces.</p> <p>For ATM2 IQ PICs only, configure OAM F4 loopback cell period at the [edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>] hierarchy level.</p>
Default	If you omit this statement, OAM F5 loopback cells are not originated, but the interface still responds if it receives OAM F5 loopback cells.
Options	<p>disable—Disable OAM loopback cell transmit feature.</p> <p>seconds—OAM loopback cell period. Range: 1 through 900 seconds</p>
Usage Guidelines	See Defining the ATM OAM F5 Loopback Cell Period.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

