

## order

---

<b>Syntax</b>	order (aaa   local);
<b>Hierarchy Level</b>	[edit logical-systems <i>logical-system-name</i> services mobile-ip authenticate], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instances-name</i> services mobile-ip authenticate], [edit routing-instances <i>routing-instances-name</i> services mobile-ip authenticate], [edit services mobile-ip authenticate],
<b>Release Information</b>	Statement introduced in JUNOS Release 9.3. Support at the [edit logical-systems <i>logical-system-name</i> services mobile-ip authenticate], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instances-name</i> services mobile-ip authenticate], and [edit routing-instances <i>routing-instances-name</i> services mobile-ip authenticate] hierarchy levels added in JUNOS Release 9.5.
<b>Description</b>	Define the authentication method performed for Mobile IP.
<b>Default</b>	AAA is the default authentication method.
<b>Options</b>	<b>aaa</b> —Authentication is performed by AAA. This option is available only in the default router and default routing instance, and therefore only in the [edit services mobile-ip] hierarchy level.  <b>local</b> —Authentication is performed using parameters defined in the local database.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Configuring Mobile IP</li><li>■ Configuring the Access Type for Mobile IP</li></ul>

